


Capsule Lifts

Civil Dimensions


Option - A

Load		Car Inside				Lift Well				Entrance
Persons	kg	A	B	J	G	C	D	F	H	E
8	544	1000	1200	1250	600	2000	1225	1230	1000	800
10	680	1100	1300	1400	650	2200	1325	1330	1100	900
13	884	1200	1400	1550	700	2400	1425	1430	1100	1000
16	1068	1300	1500	1700	750	2800	1525	1530	1200	1200

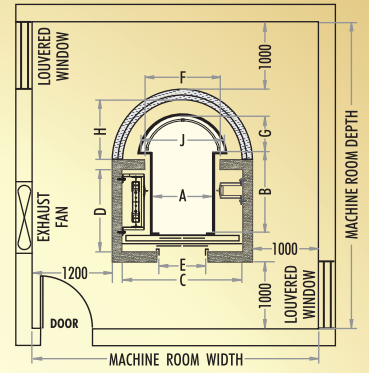


Option - B

Load		Car Inside			Lift Well			Entrance
Persons	kg	A	B	G	C	D	H	E
6	408	1000	1100	200	1850	1250	470	700
8	544	1150	1200	200	2050	1350	520	800
10	680	1250	1300	250	2250	1450	590	900
13	884	1400	1400	300	2400	1550	650	1000
16	1068	1550	1500	350	2800	1650	790	1200

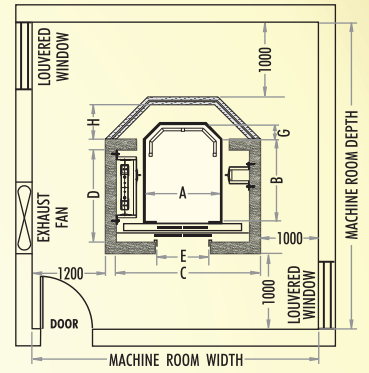


Option - C

Load		Car Inside				Lift Well				Entrance
Persons	kg	A	B	J	G	C	D	F	H	E
8	544	900	1150	1325	700	2000	1225	1130	1130	800
10	680	1000	1150	1425	800	2200	1225	1230	1200	900
13	884	1100	1150	1550	925	2400	1225	1330	1325	1000
16	1068	1300	1250	1650	1016	2800	1325	1530	1425	1200

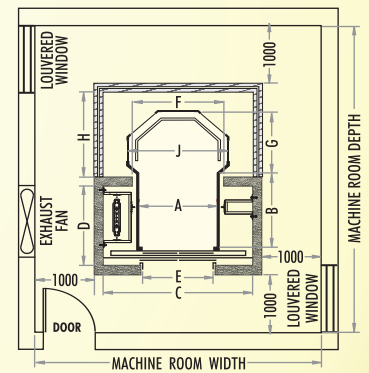


Option - D

Load		Car Inside				Lift Well				Entrance
Persons	kg	A	B	J	G	C	D	F	H	E
8	544	1000	1000	1150	850	2000	1300	1380	1000	800
10	680	1100	1100	1270	950	2200	1450	1500	1100	900
13	884	1200	1200	1390	1050	2400	1600	1620	1200	1000
16	1068	1300	1300	1510	1150	2800	1750	1740	1400	1200

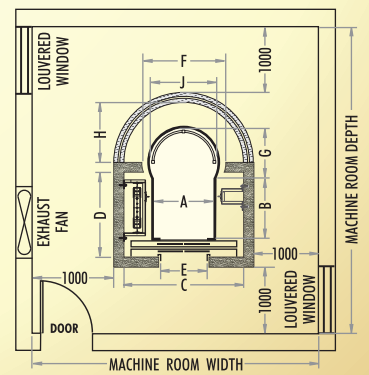

Option - E

Load		Car Inside			Lift Well			Entrance
Persons	kg	A	B	G	C	D	H	E
6	408	900	1100	450	1850	1250	860	700
8	544	1000	1300	500	2050	1450	960	800
10	680	1150	1300	575	2200	1450	960	900
13	884	1300	1500	650	2400	1650	1150	1000
16	1068	1400	1600	700	2800	1750	1350	1200

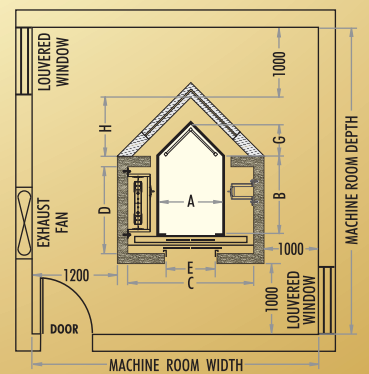

Above mentioned dimensions are suggestive only.

All dimensions in mm unless otherwise stated.

LIFT SHAFT, CAR, C.W. & MACHINE ROOM PLAN